



## ***10 Helpful Hints for the VN-4510 Coin Changer***

- 1) Use the LED on the changer to help you find problems, such as, coin jams. (See details above the keypad)
- 2) Before re-inserting the coin cassette, **always** press the yellow mode button twice. (Will home the dispenser arms)
- 3) When replacing the changer the machine power **must be switched off!!!!**
- 4) When setting the DIP-switches **never** use a pencil!!!
- 5) When clearing coin jams, use a blunt tool to ensure that the plastic housings do not become gouged.
- 6) When cleaning the acceptor, **use** a mild detergent. Ensure that the grooves, coin ramp and acceptor lid are cleaned.
- 7) When handling the coin cassette –
  - a. Grasp firmly when removing, it has significant weight when it is full.
  - b. If removed to work on changer, place in a secure area. (Perhaps, in a partially emptied column)
- 8) If coins are being routed to the wrong tubes, reprogram the coin cassette configuration. (See the label on the side of the coin cassette)
- 9) If the dollar coin is not being accepted, check for an exact change condition or ensure that switch #1 is on.
- 10) If you are having difficulty removing the coin cassette, there may be a coin jam at the top of a tube. To clear the jam, pull the cassette as far forward as possible. Then using a small screwdriver, flick the coin back-up into the separator and pull the cassette out.